



RCU9200 WIRED REMOTE



INSTRUCTION MANUAL

CONTENTS

CONTROLS	3
INSTALLATION	4
Mounting	4
Wiring	4
Operation	5
Power	5
Mute	5
Mode	5
Rewind/ Tune	5
Fast Forward	5
Up or Down	5
MOUNTING DIAGRAM	6
INSTALLATION DIAGRAM	7
STANDARD COMMUNICATIONS WARRANTY AGAINST DEFECTS	8
CUTTING TEMPLATE	11

CONTROLS



1. Power

2. LCD Window

3. Mute

4. Fast Foward/ Tune

5. Volume Up

6. Volume Down

7. Rewind/ Tune

8. Mode

INSTALLATION

Mounting

The RCU9200 is designed to be panel mounted. The mounting assembly supports mounting into panels of up to 10 mm thick. Before mounting, the RCU9200 requires a hole of 76 mm to be cut in the panel.

Using the supplied template (page 11) mark the location of the hole to be cut. Make sure there is at least 60 mm of clearance behind the panel to allow for the depth of the remote unit and its cables. There should also be at least another 10 mm clearance around the hole for the front panel facia and the U-Bracket mounting clamp.

Cut the 76 mm hole using a hole saw or similar.

Mount the RCU9200 through the hole from the front of the panel. Ensure the rubber gasket is between the front facia and the mounting surface.

Remove the two top nuts from the two bolts on the rear of the unit. **DO NOT** remove the two bottom nuts as these are required to hold the bolts in place.

Slide the U-bracket over the bolts ensuring the clearance slots in the bracket are positioned as shown. Slide the bracket forward until it presses against the rear of the mounting surface.

Refit the two nuts and tighten. Do **NOT** over tighten otherwise damage to the rear of the RCU9200 case may occur.

Wiring

Connect the attached fly lead to one of the two in-line connectors at the rear of the GR9200/GD9600. If required the cable can be extended using one or more optional LE024 5 meter extension leads (up to a maximum of 15 meters).

The single terminal pin on the rear of the case is used to activate the back lighting for the RCU9200 display and keypad. Connect this to a +12 V DC source using an insulated spade connector (to prevent the terminal shorting to the U-bracket). Connecting this to an accessory point in your vessel will ensure the back lighting turns on and off with your vessels accessory switch.

Operation

The RCU9200 duplicates most of the functions of the main GR9200/GD9600 radio panel.

Power

Press and hold the **Power** button to turn the GR9200/GD9600 ON or OFF.

Briefly press the **Power** button to adjust the display brightness on the GR9200/GD9600.

Mute

Press the **MUTE** button to mute the sound. Press again to restore the previous volume settings.

Mode

The **MOD** button switches between the various signal sources such as Tuner, AUX input or CD player. If an SD card or USB memory stick is fitted these will be included in the list of available modes.

I◀◀ Rewind/ Tune

In **Tuner** mode, briefly press I◀◀ to manually tune downwards in frequency. Press and hold I◀◀ to scan

downwards in frequency. Scanning will stop when a station is found.

When playing a CD or MP3, press I◀◀ to step to the beginning of the current track. Press I◀◀ again to skip to the previous track. Press and hold I◀◀ to rewind through the current track.

▶▶I Fast Forward

 
In **Tuner** mode, briefly press ▶▶I to manually tune upwards in frequency. Press and hold ▶▶I to scan upwards in frequency. Scanning will stop when a station is found.

When playing a CD or MP3, press ▶▶I to advance to the next track. Press and hold ▶▶I to fast forward through the current track


▲ ▼ Up or Down

Press ▲ to increase the volume or ▼ to decrease the volume.

MOUNTING DIAGRAM

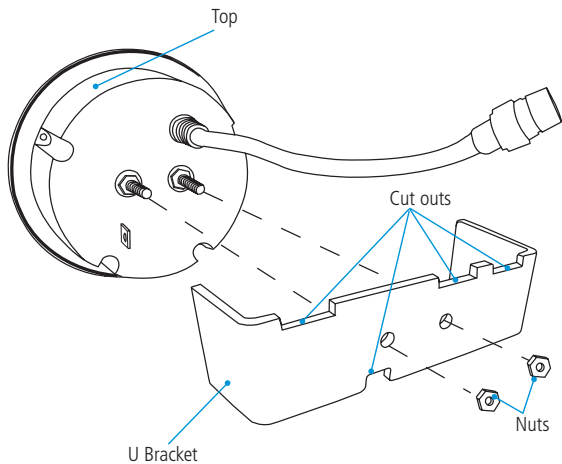

INSTALLATION DIAGRAM

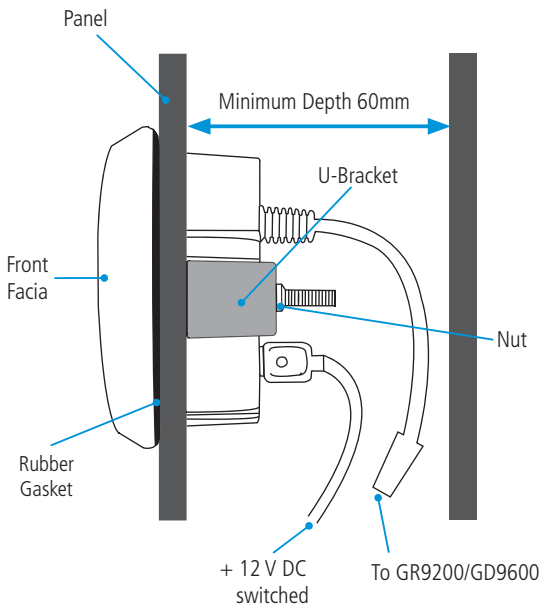 

STANDARD COMMUNICATIONS WARRANTY AGAINST DEFECTS

This warranty against defects is given by Standard Communications Pty Ltd ACN 000 346 814 (We, us, our or GME). Our contact details are set out in clause 2.7. This warranty statement only applies to products purchased in Australia. Please contact your local GME distributor for products sold outside of Australia. Local distributor details at: www.gme.net.au/export.

1. Consumer guarantees

- 1.1 Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
- 1.2 To the extent we are able, we exclude all other conditions, warranties and obligations which would otherwise be implied.

2. Warranty against defects

- 2.1 This warranty is in addition to and does not limit, exclude or restrict your rights under the Competition and Consumer Act 2010 (Australia) or any other mandatory protection laws that may apply.
- 2.2 We warrant our goods to be free from defects in materials and workmanship for the warranty period (see warranty table) from the date of original sale (or another period we agree to in writing). Subject to our obligations under clause 1.2, we will at our option, either repair or replace goods which we are satisfied are defective. We warrant any replacement parts for the remainder of the period of warranty for the goods into which they are incorporated.
- 2.3 To the extent permitted by law, our sole liability for breach of a condition, warranty or other obligation implied by law is limited
 - (a) in the case of goods we supply, to any one of the following as we decide -
 - (i) the replacement of the goods or the supply of equivalent goods;
 - (ii) the repair of the goods;
 - (iii) the cost of repairing the goods or of acquiring equivalent goods;
 - (b) in the case of services we supply, to any one of the following as we decide—
 - (i) the supplying of the services again;
 - (ii) the cost of having the services supplied again.
- 2.4 For repairs outside the warranty period, we warrant our repairs to be free from defects in materials and workmanship

for three months from the date of the original repair. We agree to re-repair or replace (at our option) any materials or workmanship which we are satisfied are defective.

- 2.5 We warrant that we will perform services with reasonable care and skill and agree to investigate any complaint regarding our services made in good faith. If we are satisfied that the complaint is justified, and as our sole liability to you under this warranty (to the extent permitted at law), we agree to supply those services again at no extra charge to you.
- 2.6 To make a warranty claim you must before the end of the applicable warranty period (see warranty table), at your own cost, return the goods you allege are defective, provide written details of the defect, and give us an original or copy of the sales invoice or some other evidence showing details of the transaction.
- 2.7 Send your claim to:
Standard Communications Pty Ltd.
Unit B, 22-24 College Street,
Gladesville, NSW 2111, Australia.
Tel: (02) 9879 8888
Fax: (02) 9816 4722
Email: servadmin@gme.net.au
- 2.8 If we determine that your goods are defective, we will pay for the cost of returning the repaired or replaced goods to you, and reimburse you for your reasonable expenses of sending your warranty claim to us.

3. What this warranty does not cover

- 3.1 This warranty will not apply in relation to:
- (a) goods modified or altered in any way;
 - (b) defects and damage caused by use with non Standard Communications products;
 - (c) repairs performed other than by our authorised representative;
 - (d) defects or damage resulting from misuse, accident, impact or neglect;
 - (e) goods improperly installed or used in a manner contrary to the relevant instruction manual; or
 - (f) goods where the serial number has been removed or made illegal.

4. Warranty period

- 4.1 We provide the following warranty on GME and Kingray products. No repair or replacement during the warranty period will renew or extend the warranty period past the period from original date of purchase.

PRODUCT TYPE	WARRANTY PERIOD
Marine accessories	1 year



A division of Standard Communications Pty Ltd.

Head Office: PO Box 96, Winston Hills, NSW 2153, Australia.

New Zealand: PO Box 58-446 Botany, Auckland, 2163, NZ. T:(09) 274 0955.

All other international enquires email: export@gme.net.au

Tear off here

 
CUTTING TEMPLATE

Outer edge of wired remote (Push out)

Mounting hole (Push out)

76mm

90mm

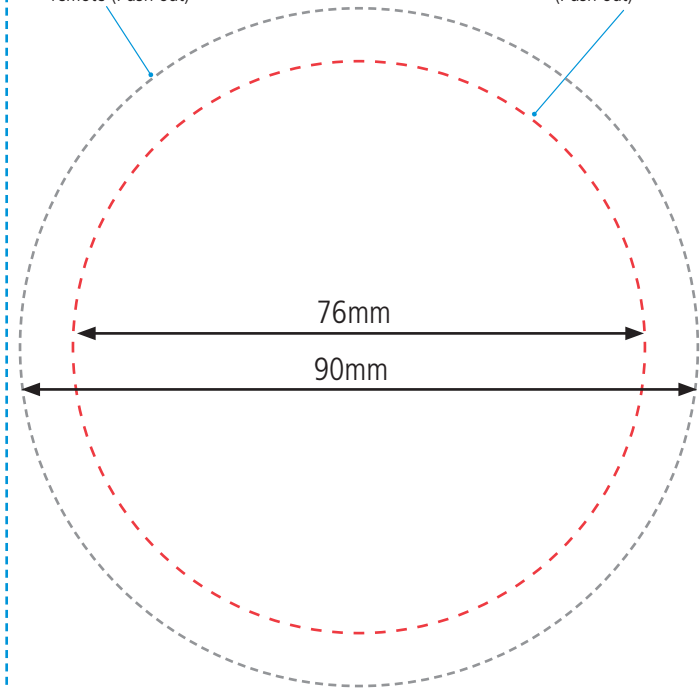

CUTTING TEMPLATE