


## MIKOO I B INSTALLATION - CUTTING TEMPLATE

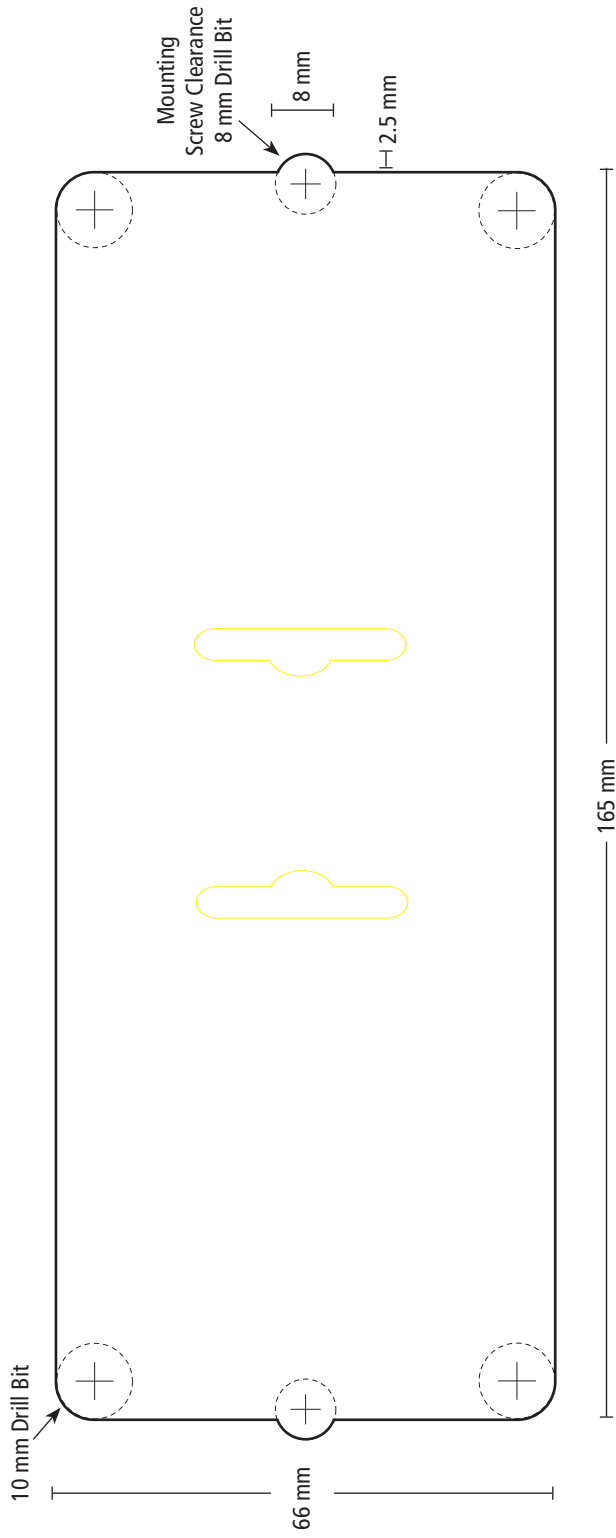

Mark and cut a hole 66 mm (h) by 165 mm (w), allowing for clearance of the two mounting screws holding the radio to the surround.  
Use a 10 mm drill bit to form the radius of the corners and an 8 mm drill bit for the clearance of the mounting screws.